# EXPECT THE BEST BEST



**V8/V8S Loudspeaker** 



Unit 11,
Torc:MK
Chippenham Drive
Kingston
Milton Keynes
MK10 0BZ
United Kingdom.
Tel: +44(0)1908 281072 email: enquiries@studiomaster.com

USER GUIDE

#### IMPORTANT SAFETY SYMBOLS





Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or



The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.



Protective grounding terminal



Alternating current/voltage Hazardous live terminal

ON: Denotes the apparatus is turned on

WARNING: Describes precautions that should be observed to prevent the danger of injury or death to the operator.

**CAUTION:** Describes precautions that should be observed to prevent danger of the apparatus.

#### 1. IMPORTANT SAFETY INSTRUCTIONS

- · Read these instructions.
- · Keep these instructions.
- · Heed all warning.
- · Follow all instructions.

#### · Water & Moisture

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

#### Heat

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

### · Ventilation

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer's instructions.

#### · Object and Liquid Entry

Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

#### Power Cord and Plug

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, refer

to electrician for replacement.

OFF. Denotes the apparatus is turned off

## · Power Supply

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

#### Fuse

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

## · Electrical Connection

Improper electrical wiring may invalidate the product war-

#### Cleaning

Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

## Servicina

Do not implement any servicing other than those means described in the manual. Refer all servicing to qualified service personnel only.

 Only use accessories/attachments or parts recommended by the manufacturer.

## Specification

MODEL V8

two way line array Type

65Hz~20KHz (-10dB) 80Hz~18KHz ( $\pm$ 3dB) Frequency response

Coverage (H)(-6dB)

 $0^{\circ}$   $-6^{\circ}$  each step  $1^{\circ}$ Coverage (V)(-6dB)

 $2\times8$ " (203 mm)/2" voice coil LF unit

 $2\times1.75$ " (44 mm) compression driver HF unit

Sensitivity(1W@1m) LF unit: 97dB HF unit: 110 dB

Rated impedance LF unit:  $16\Omega$  HF unit:  $16\Omega$ 

Power handling LF unit: 300W (Continuous) , 1200W(Peak)


HF unit: 80W (Continuous) , 320W (Peak)

Max SPI LF unit:128dB HF unit:135dB

2KHz Crossover

743×276×440 (mm) Dimension(WxHxD)

Weight 30kg

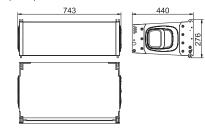

Model V8S

Line array woofer Type

40Hz $\sim$ 500KHz(-10dB) 45Hz $\sim$ 400KHz $(\pm 3$ dB)Frequency response

I F unit  $2 \times 15$ " ( 388 mm ) /4" voice coil

Sensitivity(1W@1m) 101dB Rated impedance  $4 \Omega$ 

Power handling 1000W (Continuous) , 4000W(Peak)

Max SPI 137dB Crossover 300Hz

Dimension(WxHxD)  $743 \times 554 \times 703 \, (mm)$ 

Weight 64kg

